








If your WM1000 looks like diagram X, follow instructions below to insert a refill roll, if not P.T.O.

Instructions for use and refilling:

- 1.** Unlock to open lid. Open body. With index fingers press firmly inwards and upwards on arrows at each end of the dispenser with thumbs on top for support.
- 2.** Ensure cardboard end of roll is on the right.
- 3.** Place roll onto right hand bracket **(A)**.
- 4.** Once correctly aligned, push the left hand bracket **(B)** to the left to allow the roll to drop into position.
- 5** Pull out 20cm of material and lay over the top of the lid. Push the body of the dispenser back into position making sure both ends lock securely.

***Your WM 1000 is now ready to use.
Pull the foil or film to the required length,
press lid down to cut and release.***

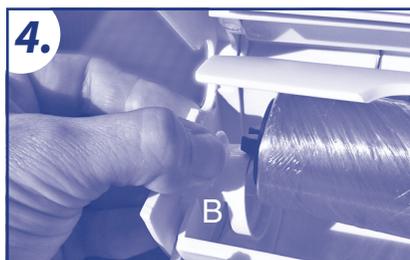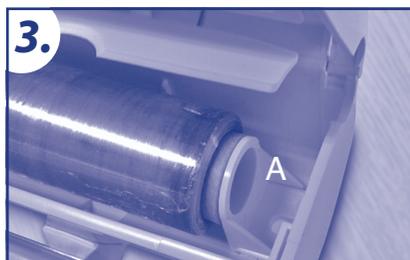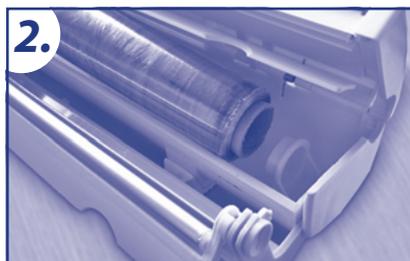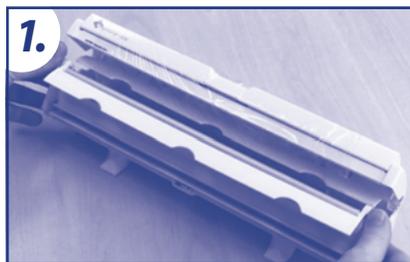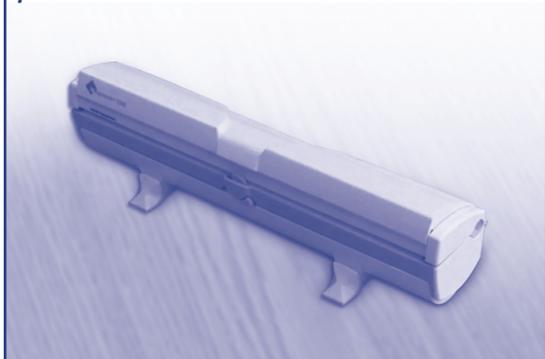



If your WM1000 looks like diagram Y, follow instructions below to insert a refill roll, if not P.T.O.

Instructions for use and refilling:

1. Unlock to open lid.
2. Open body. With index fingers press firmly inwards and upwards on arrows at each end of the dispenser with thumbs on top for support.
3. Insert roll by aligning the black blocks in the end of the roll with the block locators on the left of the dispenser base.
4. Once correctly aligned, push the cradle clip over to the right and gently press the roll into position.
5. Pull out 20cm of material and lay over the top of the lid. Push the body of the dispenser back into position making sure both ends lock securely.

Your WM1000 is now ready to use.

Pull the foil or film to the required length, press lid down to cut and release.

